

2014 NAVIGATION/MULTIMEDIA Receiver Firmware Update Guide

Introduction

- This document describes the procedure and precautions for upgrading the 2014 NAVIGATION/MULTIMEDIA receiver firmware.
- If an error occurs while you are updating the firmware, the 2014 NAVIGATION/MULTIMEDIA receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.

Target Models

This updater can be used to update the firmware of the following models.

DDX8901HD	DDX771WBT	DDX7701HD	DDX7071BT
DDX7055BT	DDX7035BT	DDX7035BTM	DDX7025BT
DDX635WBT	DDX635WBTM	DDX5901HD	DDX5055BT
DDX5035BT	DDX5035BTM	DDX5025DAB	DDX5025BT

Target Firmware

This updater can be used to update the following firmware version:

Ver 1.4.0 or earlier

To check the firmware version, refer to “Checking the Firmware Version” below for information on how to check the firmware version. By executing this updater, the firmware version will become “Version 1.5.0”.

Work Flow

- Step 1. Download the firmware files, and copy them to USB memory.
- Step 2. Update the firmware. **(It takes about 2 minutes.)**
Reset the unit.
- Step 3. Check that the firmware has been updated.

Creating the Update Media

Create the update media on your PC.

 
1. Download the Updates from the Web site.
2. Decompress the downloaded file.
3. Copy the decompressed file to the top of hierarchy in USB memory.




- USB memory is recommended as the update media.
- You can also copy the updater to a device containing audio files and update the firmware from it.
- Update cannot be performed if it is copied inside a folder.
- If the updater file name is changed, update cannot be performed.

Checking the Firmware Version


1. Touch the [SETUP] to display the Top Menu screen.

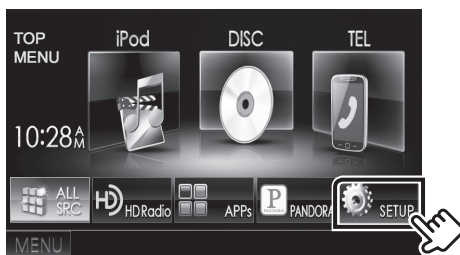

 2. Touch the [System Information] to display the System Information screen.

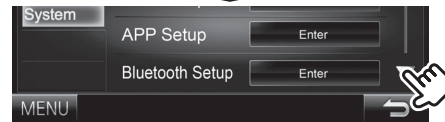

 3. Check the version.

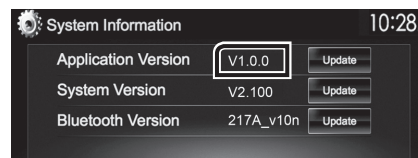

Updating the Program

1. Connect the USB memory.
2. Touch the [SETUP] to display the Top Menu screen.
3. Touch the [System Information] to display the System Information screen.
4. Touch the [Update] to update starts. **(It takes about 2 minutes.)**



Caution: The screen may go blank for a few seconds. Do not unplug the USB memory or Power Off the unit during the Update Procedure.

5. System Reboot & Software Update Screens.
6. Once the “Update completed” screen is displayed, remove the USB memory.
7. Reset the unit.
8. Check that the firmware version is updated, by referring to “Checking the Firmware Version”.
When “Version 1.5.0” is displayed, the firmware version is updated successfully.

Precautions

- Update cannot be performed with other media.
- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- Do not turn off the engine or Navigation/Multimedia receiver power while updating. Update cannot be performed correctly and the Navigation/Multimedia receiver may become unusable.