



Installation manual for: CTKFD40C Ford Ranger

Technical support provided by,



P: 03 9847 0177 E: solutions@stingeraustralia.com.au



Installation kit includes the following items:

1x Replacement Panel

1x Switch Lead

1x Replacement Trim

1x Mini Speaker

1x Interface lead

1x Interface Box

1x Hazard Switch

1x Door lock Switch

2x Mounting Plates

4x Screws

Note: Phone Button Support Requires an Additional Interface - PACSWICP2 (Sold Separately)



Installation Guide

Part No: CTKFD40C

Ford Ranger 2012>2015







- Remove the OEM plastic fascia with plastic removal tools use the lever tools in the highlighted area's.
- Once the fascia is unclipped, pull the fascia towards the rear of the vehicle
- 3 Unplug the three OEM connectors from the back of the fascia

Technical support provided by,



P: 03 9847 0177 E: solutions@stingeraustralia.com.au







- 4 Unscrew the two screws highlighted, then remove the head unit.
- Remove heater controls by removing the screws highlighted then fit the heater controls into the new fascia
- Remove the display by unscrewing the two screws on top of the display. Then unclip the display loom clips where highlighted





P: 03 9847 0177 E: solutions@stingeraustralia.com.au
















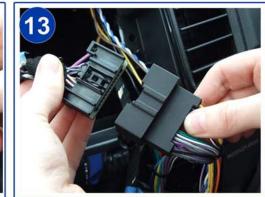

- 7 Remove the OEM display connector
- Feed the Connects2 stalk display harness up through the dash As shown in picture
- Onnect the Connects2 stalk display connector into the OEM display and refit the display

- 10 Plug the OEM display connector into the Connects2 interface box
- 11 Plug the Stalk loom connector (14 Pin connector) into the interface box
- 12 Plug the connets2 stereo patch lead into the interface
- 13 Plug the main OEM connector into the Connects2 main connector





P: 03 9847 0177 E: solutions@stingeraustralia.com.au









Tuck and hide away the stalk interface box

Remove clips from Connects2 fascia Fit stereo brackets - Dont fully tighten

Fit stereo into dash - Test fit

Test fit fascia - manipulated stereo into final postion


Remove fascia

Remove stereo - Being careful not to move the barckets

Fully tighten stereo brackets

Re-fit stereo

Re-fit fascia clips

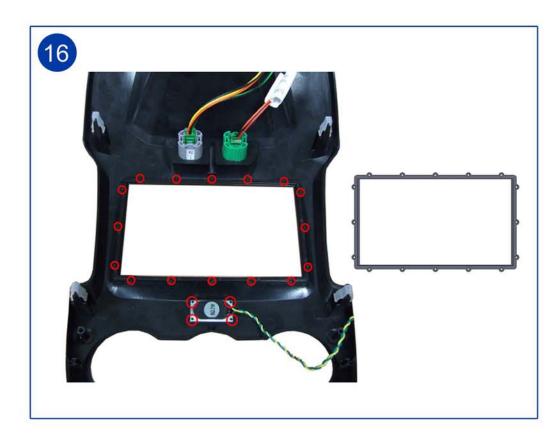

Place the speaker onto the Connects2 fascia and with a soldering iron, melt the four plastic tabs (highlighted in the picture) in the corner of the speaker.

16

Try the supplied trim around the face of the head unit first before melting into please (highlighted in th picture). If the trim does not fit around face of head unit then trim is not needed






P: 03 9847 0177 E: solutions@stingeraustralia.com.au







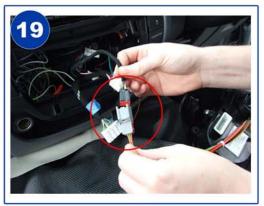







- 17 Connect up the mini speaker connector
- Plug the Connects2 cable into the Hazard and door lock switch connectors at the top of the fascia (Grey switch first)
- Connect the other end of the switch connector cable onto the vehicles harness. Also connect the Kenwood and ISO head unit harnesses.
- 20 Reconnect the heater controls

- Unclip switch wire from switches and feed the switch connector wires around the head unit and tidy up the wiring behind the heater controls to allow the fascia to clip into place correctly
- 22 Finally fit the fascia into place and the install is complete

Installation Guide


Part No: CTSFO008.2


Ford Can-Bus Steering Wheel Control Interface

Technical support provided by,



P: 03 9847 0177 E: solutions@stingeraustralia.com.au

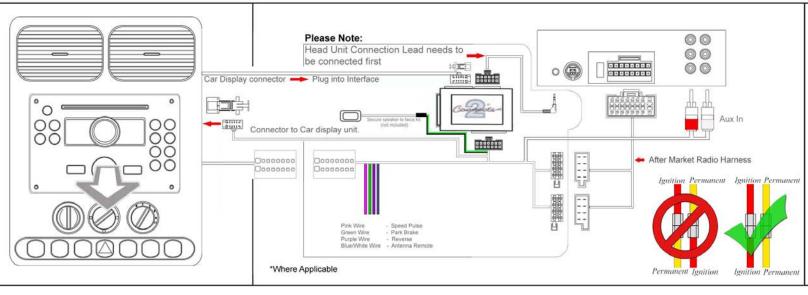

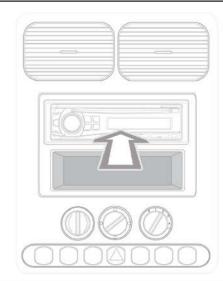

Vehicle Compatibility:

Ford Ranger 2012-15

Steering Wheel Control Functions



Seek/Track-



*Note

All dates are guide lines only as specifications of vehicles change.To retain phone button functions, PACSWICP2 is required.





Installation Guide

Part No: CTSFO008.2


Ford Can-Bus Steering Wheel Control Interface



User guide to change the time and date



Single Press (Button 1) switches display on .
Press & Hold Speech Button (button 1) for 2 seconds this will enable menu mode option.





Press (Buttons 3/5) Up/down till clock setting is selected. Then press (Button 1) to confirm.

To Adjust the clock use (Buttons 3/5), select the next option use (Buttons 2/4). and then press (Button 1) to confirm.





Press (Buttons 3/5) Up/down till set date is selected Then press (Button 1), to confirm.





1 - Speech Button
2 - Select Right
3 - Select up

To adjust the date use (Buttons 3/5) And to select the next option use (Buttons 2/4) .press (Button 1) to confirm.

When the time and date has been set, Press the **speech button(Button 1)** once to confirm.

The menu option will time out after 15-20 seconds.

4 - Select left

3 - Select up

5 - Select down



